TURTLE


FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR010XX (Crown)

PSC CYNN (92A CHASIS E2) 11-18 (MR01042)
FRD FUSN 02-12 (MR01019)
MIT L200 (Mk4) 06-14 (MR01025)
VWGN TORG (7P) 11-18 (MR01049)
NSS JUK (F15) 11-19 (MR01026)
VWGN TGN 07-16 (MR01043)
VWGN TGN (5N) 16- (MR01043)
PEU 38 17- (MR01064)
FRD RNGR 11- (MR01080)
DAC SNDR 07-20 (MR01006)

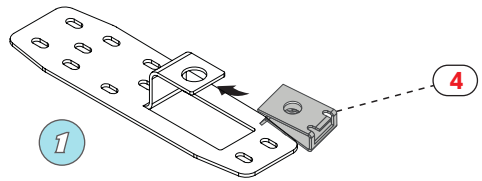



M6 klipsi metal parçada belirtilen yere takınız.
Attach the M6 clip to the place indicated on the metal part.

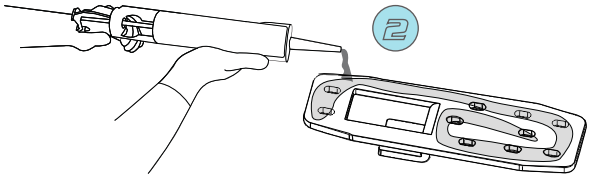

Resimde belirtilen metal parçaların altına yapıştırıcı malzemeyi sürünüz, Ardından ürünü araç tavanına hizalayıp yerleştiriniz ve yeterince kurumasını bekleyiniz.

Apply the adhesive material to the underside of the metal parts indicated in the picture, then align and place the product on the car roof and let it dry suffciently.

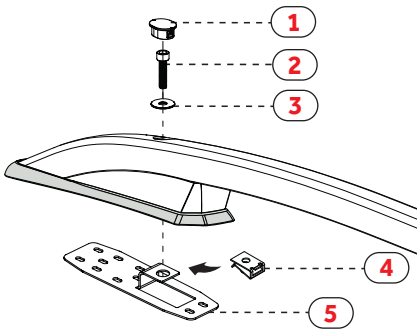


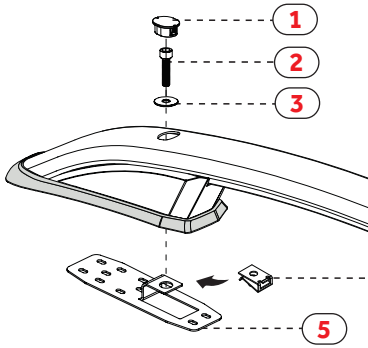




Yapıştırmalı tavan çıtalarında yük taşınması uygun değildir.
It is not suitable to carry loads on adhesive roof rails.

LEFT (SOL)

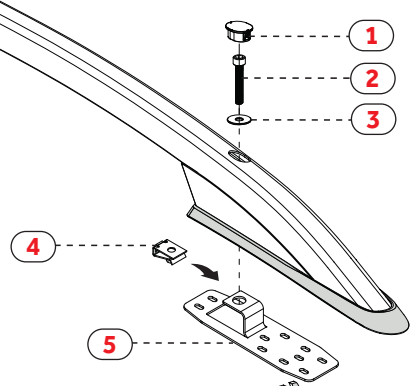

RIGHT (SAĞ)

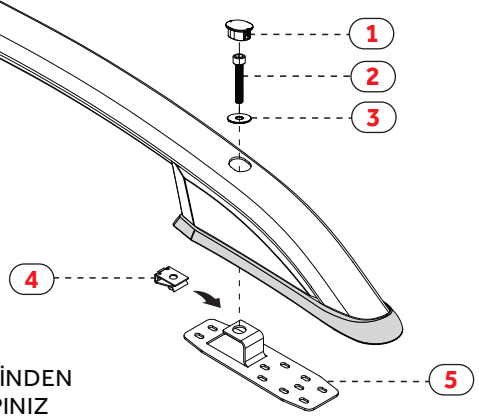

FRONT (ÖN)

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M6x25 INBUS BOLT (5Nm)	4
3-	M6 WASHER	4
4-	M6 SPEEDNUT	4
5-	ROOF BRACKET	4
6-	5mm ALLEN WRENCH	1

ATTENTION;
MOUNT AFTER 24 HOURS
FROM SILICON BONDING

DİKKAT;
SİLİKONLA YAPIŞTIRMA İŞLEMİNDEN
24 SAAT SONRA MONTAJ YAPINIZ

MR010XX / Rev.05 / 21.11.2025 (GKMN)

(0282) 746 13 20 www.turtlecancarry.com / www.canotomotiv.com.tr info@canotomotiv.com.tr Veliköy OSB 4. Cadde No:20/A Çerkezköy/TEKİRDAĞ CAN Otomotiv İNŞ. İTH.İHR.SAN.VE TİC.LTD.ŞTİ.